


Optional Forward and Reverse valve allowing to switch the direction of the squeezing rollers when replacing a main-hose, or in case of a main-hose clog.

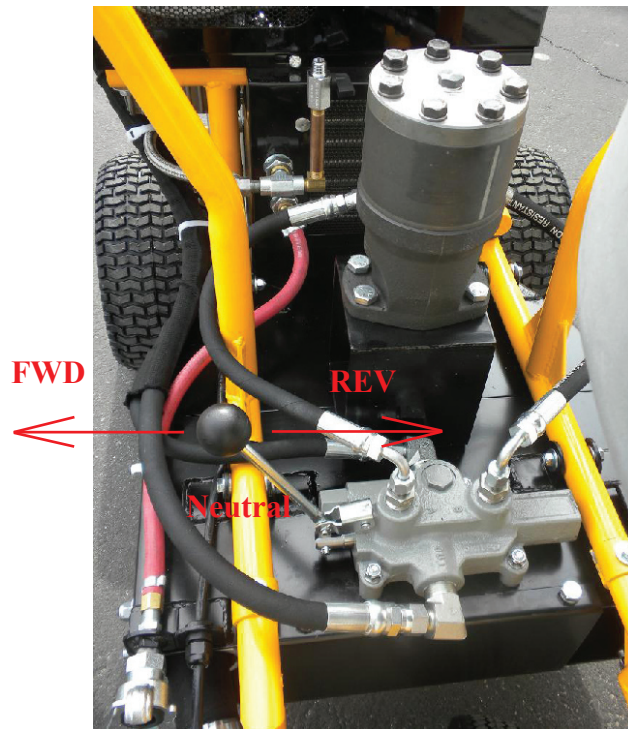

Note:

Before switching direction turn main electric switch off.

Never switch from FWD to REV in one motion, always stop in Neutral for a few seconds.