



How to remove the Honda engine



1. Loosen all 4 compressor bolts, do not remove them from it place.

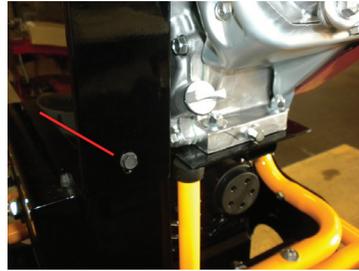

2. Open and remove belt cover screw.

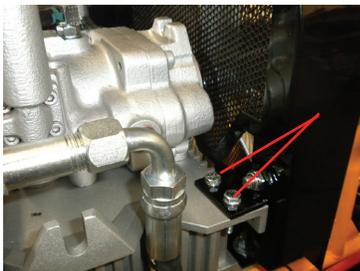


3. Open the 2 bolt and remove cover to expose belts.



4. Insert screw driver between belt and large pulley.



5. Pull starter rope until belt get off pulley.

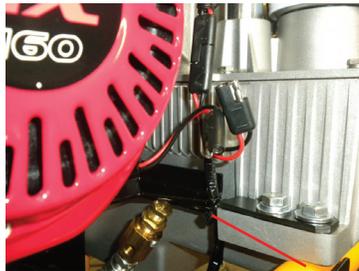

6. Disconnect electric wire connection that go to engine only, and then cut off tie (mark red).



7. Open bolts move the bracket to the side, then lift engine and remove it from belts.